


SIDE ASSEMBLIES

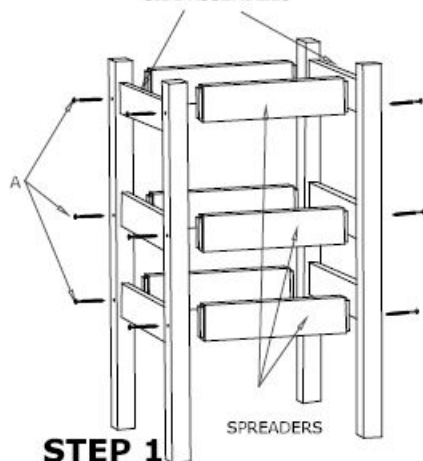

STEP 1


Attach Side Assemblies to Spreaders by placing the tenon into the mortise (pocket) and attaching with screws (A) as shown.

SEAT ASSEMBLY



STEP 2


Place the Seat Assembly on the base so that the pre drilled holes in the seat align with the pre drilled holes in the Side Assemblies.

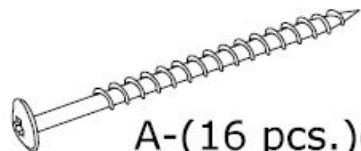

A-(16 pcs.)colored

LIST OF PARTS

Side Assemblies (2)
Spreaders (6)
Seat Assembly (1)
Colored Screws "A" (16)
Insert Bit Tool (1)

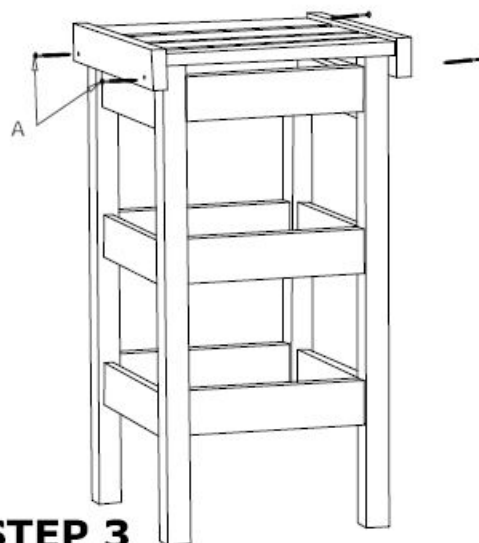

STEP 3

Attach the Seat Assembly to the base using screws (A).